Installation measurements

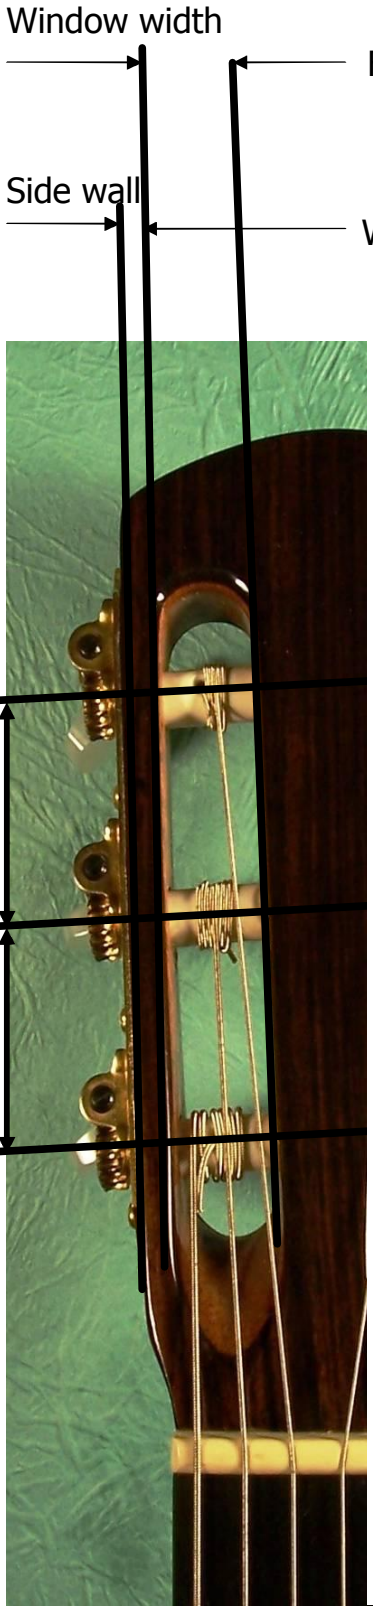

In order to adjust the string shafts correctly I require the measurements for F and W.☐☐☐☐
Please note: It is important that you supply these measurements for every order.☐☐☐☐
The distance between shafts is fixed at 2 x 35mm.☐☐☐☐
Drill diameter = 10mm

An indispensable aid for the drilling of ☐☐ the holes into the ☐☐ new head is the ☐☐ drilling template.
>>>>>>>>>>>>

It supports three ☐☐ hardened drilling ☐☐ sleeves.

*
No need to pre-drill the holes.

*
The three holes are☐ in exactly the right ☐☐ distance along a straight line.

*
This enables a fast and precise fitting of the tuning machines.